


Specification



(Salon pole control)



(Installation Accessories)

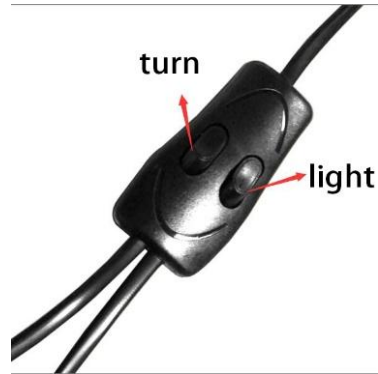

(On/Off/Switch control)

Installation Steps

- 1: Put the salon pole on the wall.
- 2: Use sheet iron fixed bracket, and use screws tighten on both sides.
- 3: Built-in long-life AC motor: 110V/50RPM.
50 r/min, 50/60HZ 4W

Outside cylinder material: PC or PVC

4: Lamp tube: 110 volt voltage 4 watt current

NOTICE: After 12 hours of continuous use, please cut off power supply by the end of the day!


Specification



(Salon pole control)



(Installation Accessories)

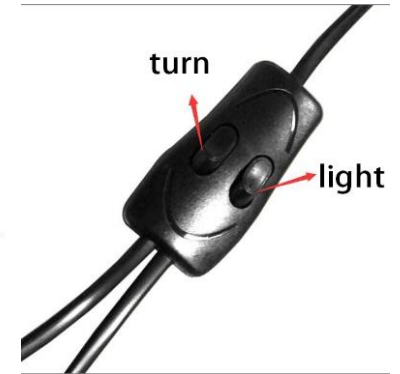

(On/Off/Switch control)

Installation Steps

- 1: Put the salon pole on the wall.
- 2: Use sheet iron fixed bracket, and use screws tighten on both sides.
- 3: Built-in long-life AC motor: 110V/50RPM.
50 r/min, 50/60HZ 4W

Outside cylinder material: PC or PVC

4: Lamp tube: 110volt voltage 4 watt current

NOTICE: After 12 hours of continuous use, please cut off power supply by the end of the day!