


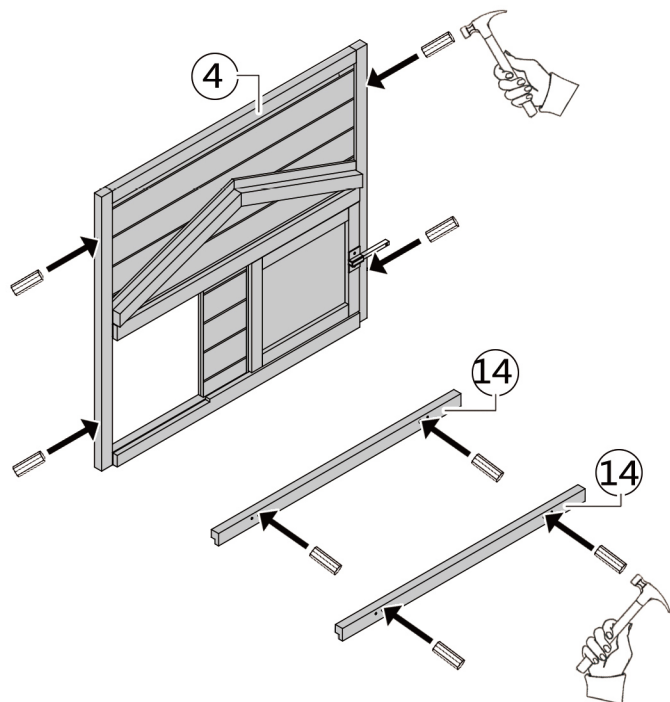


6010-2135 Assembly Instructions


-  A 3.5x40 20+2PCS
-  B 3.5x50 6+2PCS
-  C 3.0x38 4+2PCS
-  D 3.0x25 1+2PCS
-  E 3.5x25 6+2PCS
-  F 3.5x30 14+2PCS
-  G 3.0x16 18+2PCS
-  H M3x12 1+1PCS
-  I M6x50 8+1PCS
-  2PCS
-  14+2PCS
-  1PC

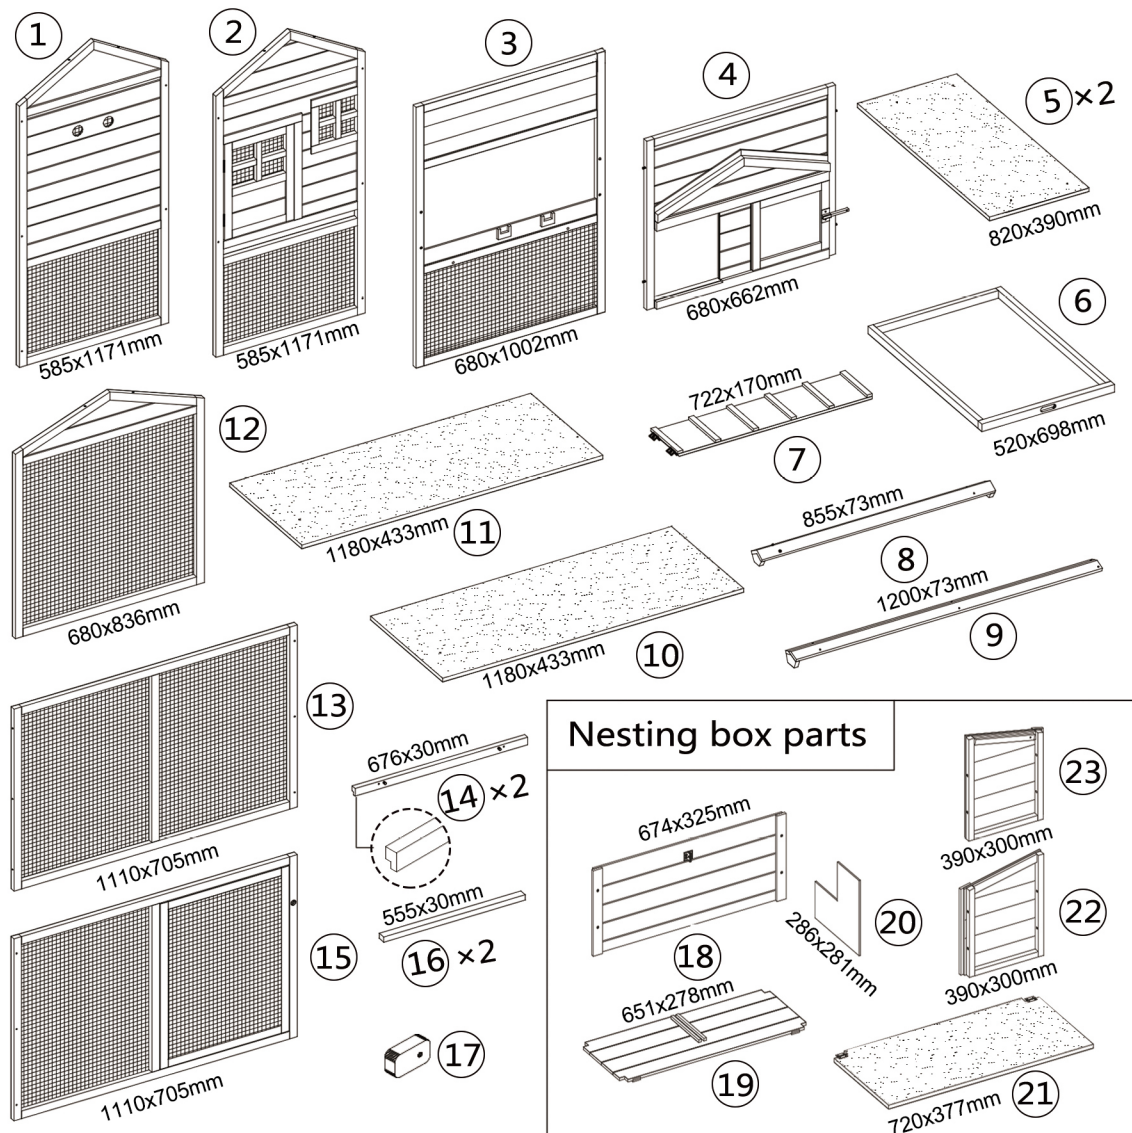


Step 1

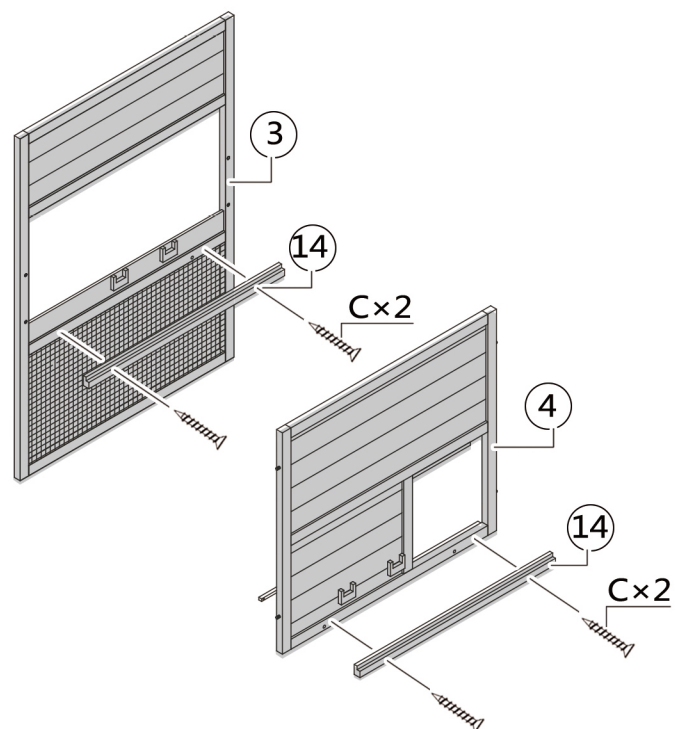


Step 2

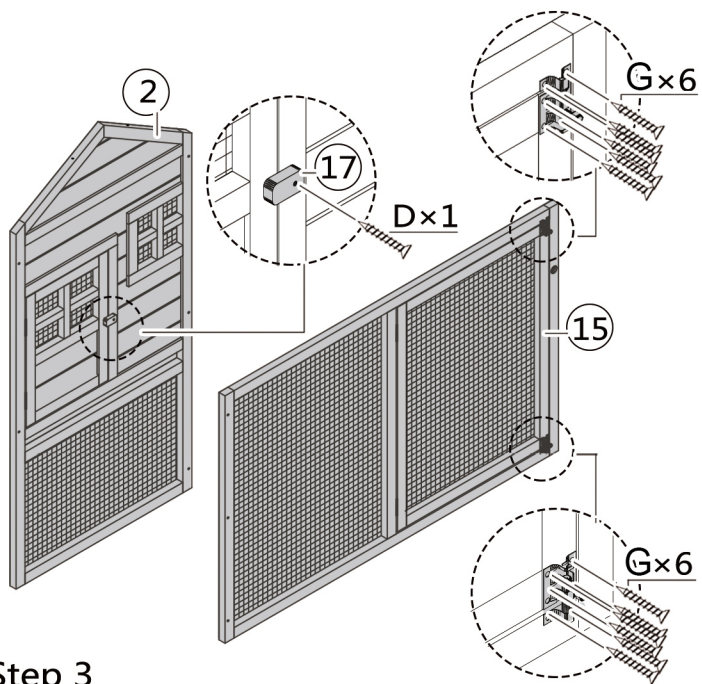


Step 3

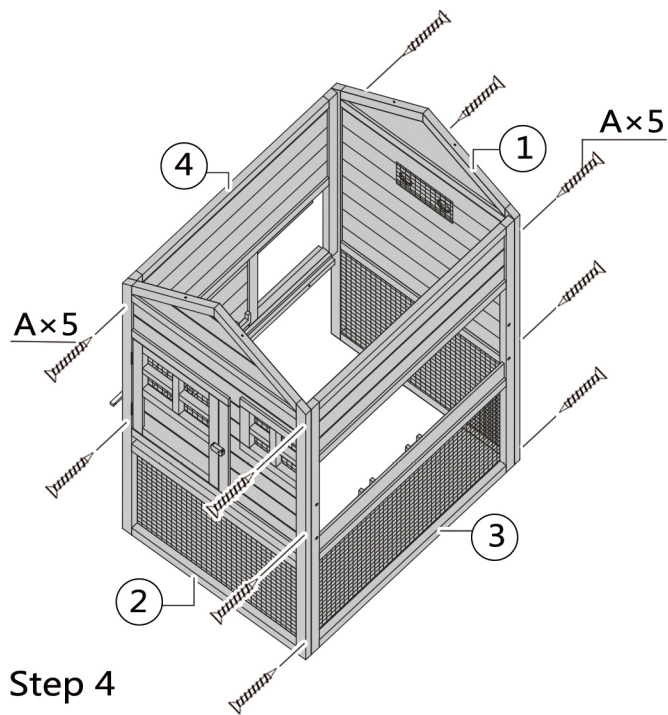


Step 4

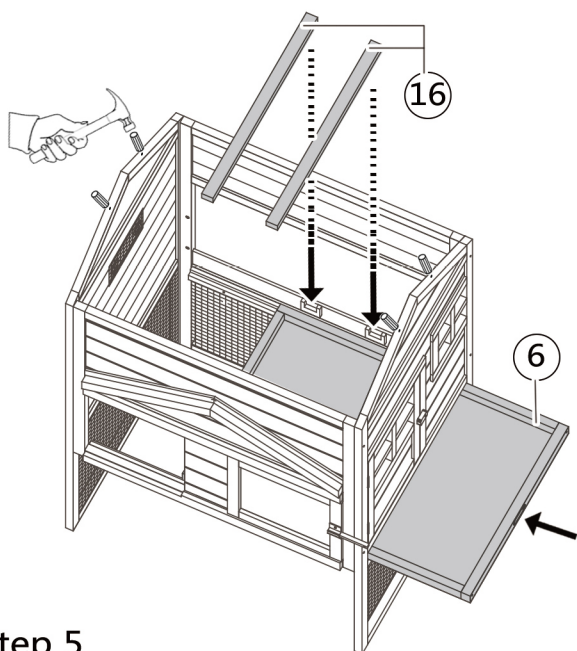


Step 5

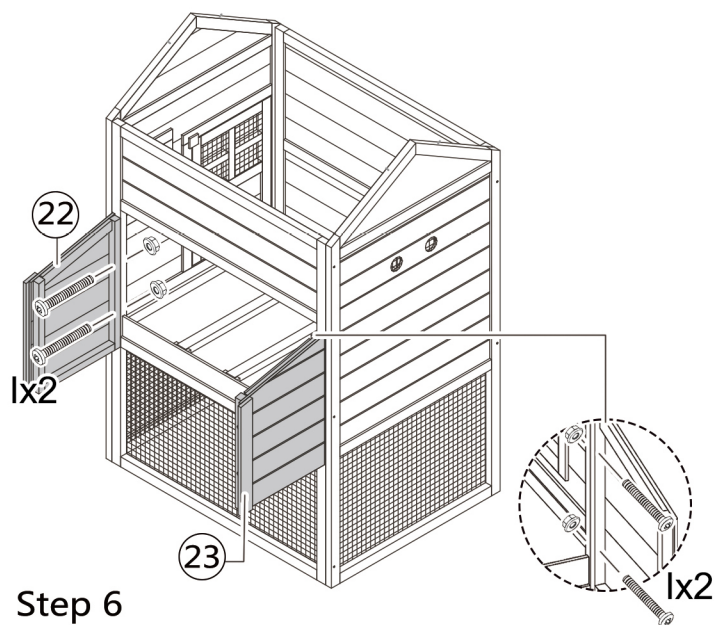


Step 6

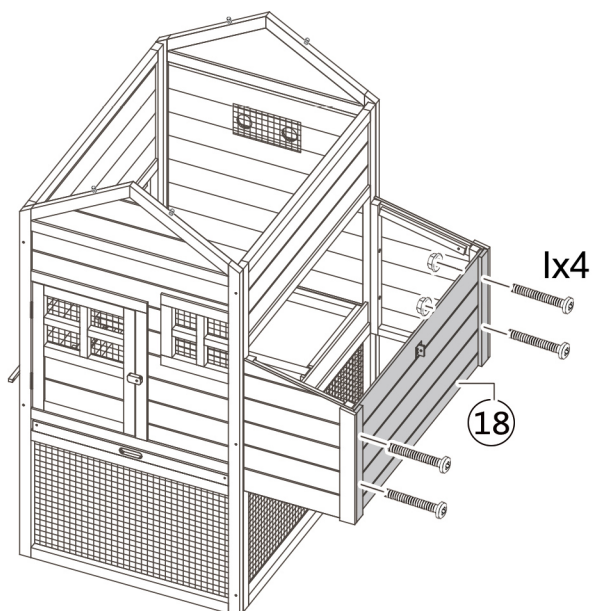


Step 7

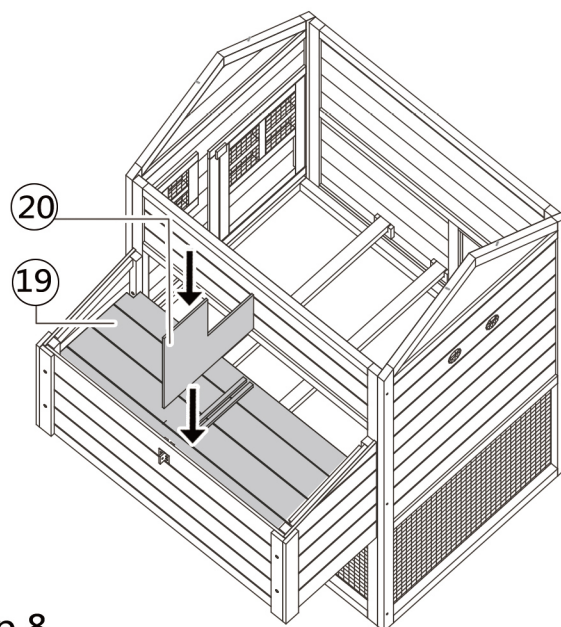


Step 8

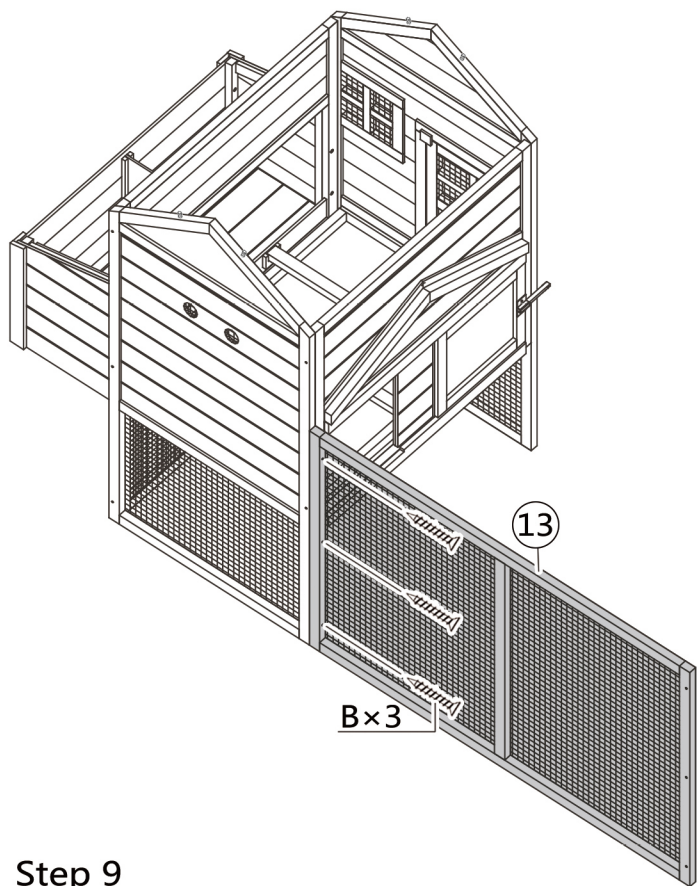


Step 9

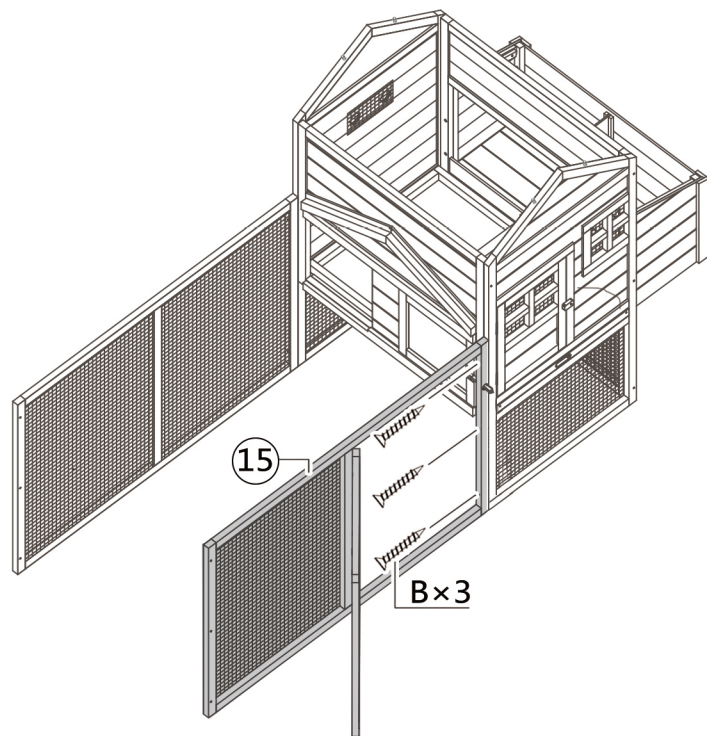


Step 10

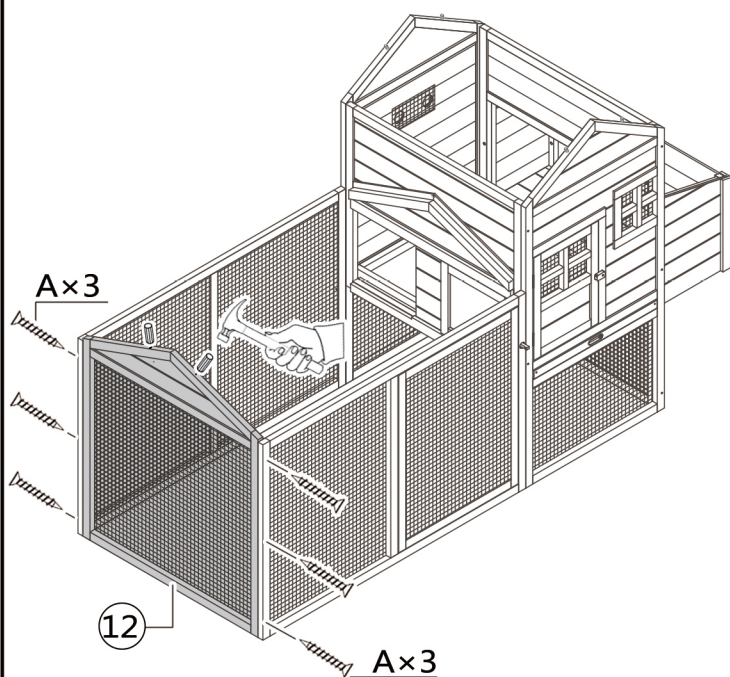


Step 11

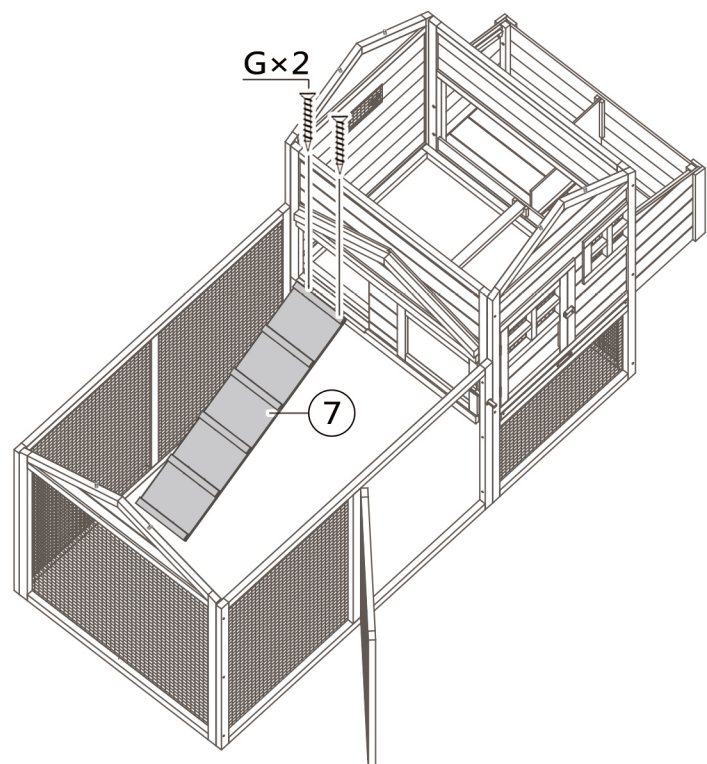


Step 12

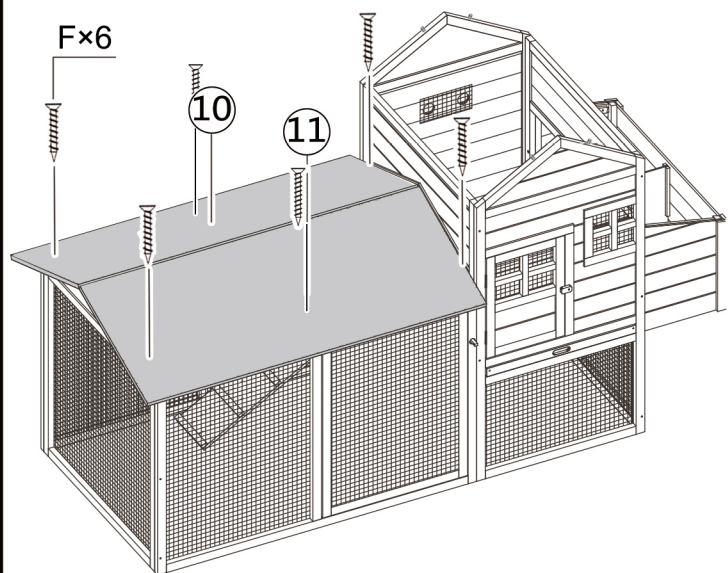


Step 13

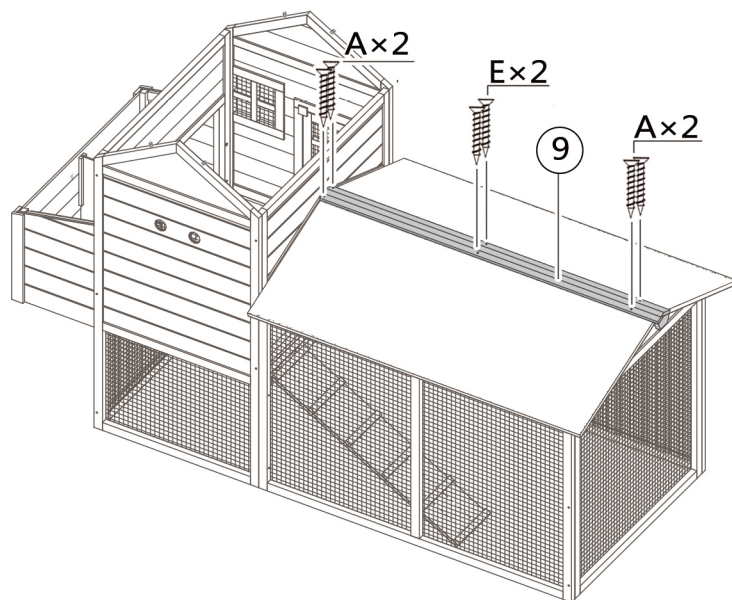

Step 14

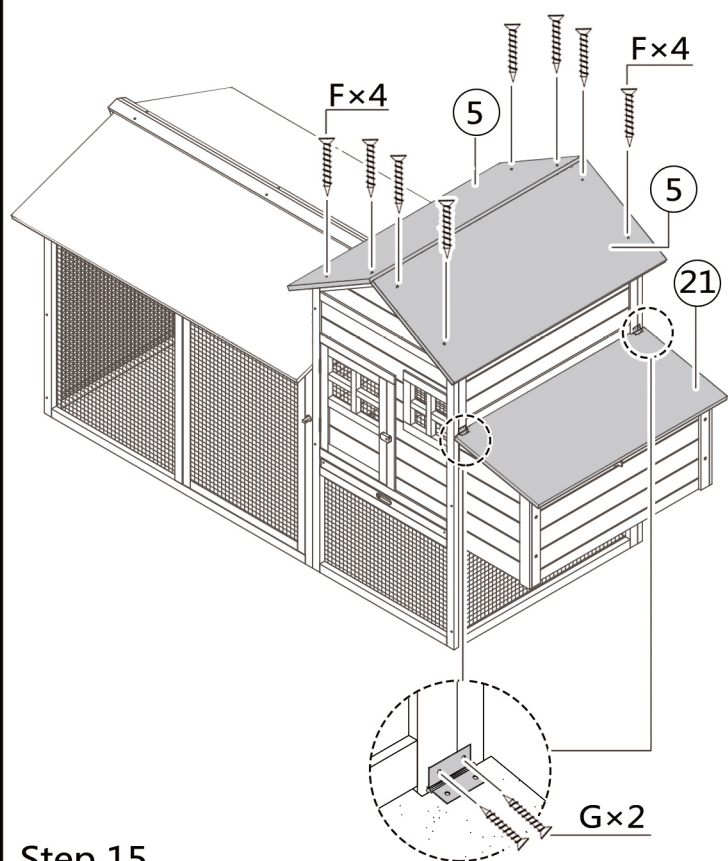

Step 15

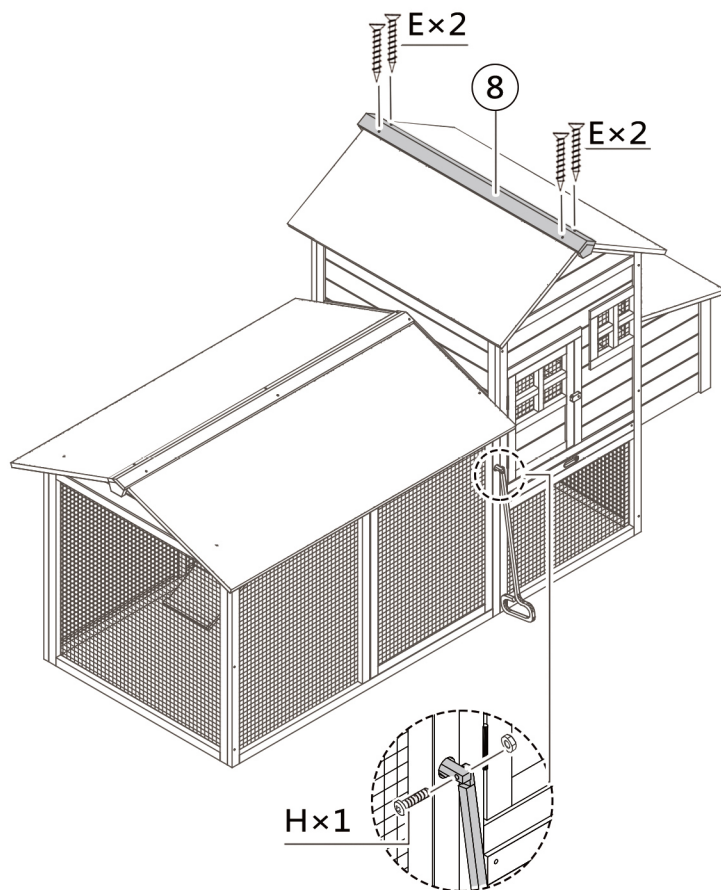

Step 16