



BEAUTY BED

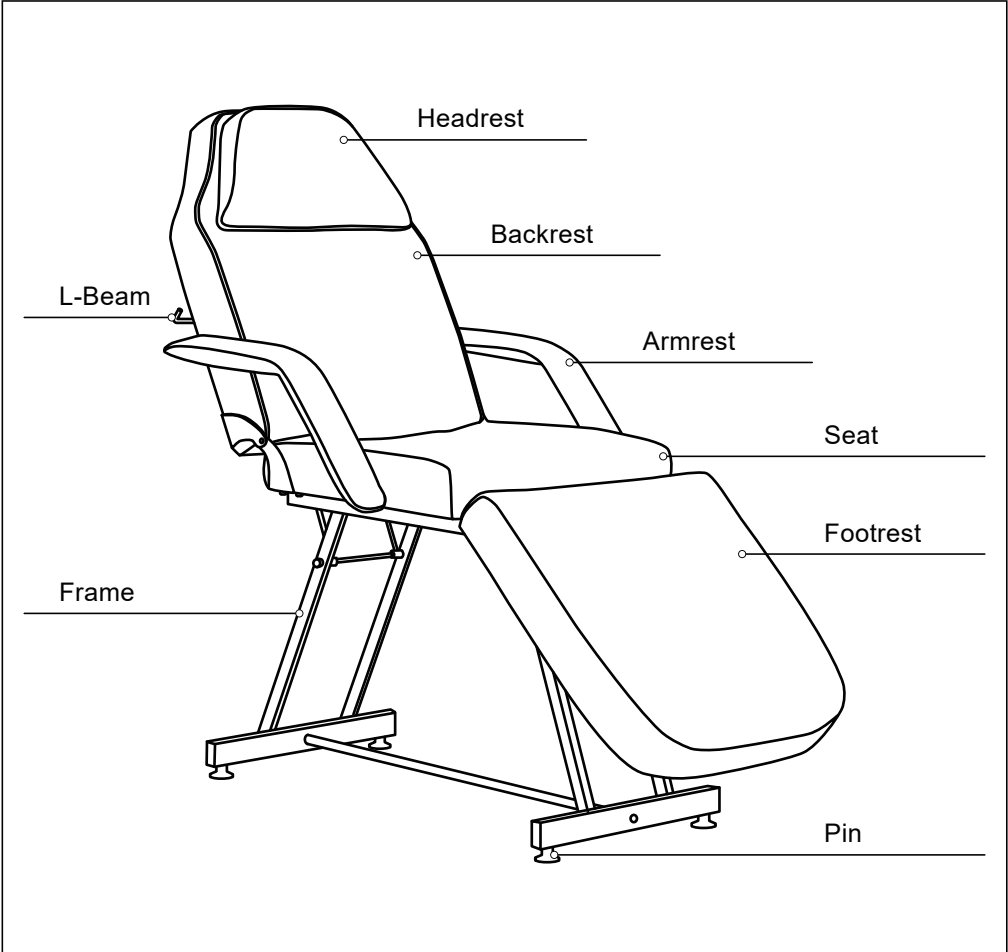
THERAPY BED MASSAGE BED



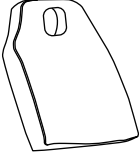
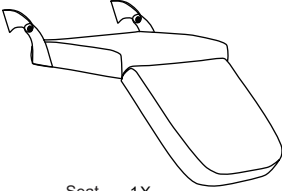


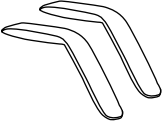
Pfillo GmbH

6154-0015


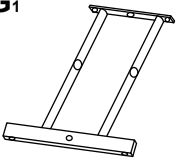
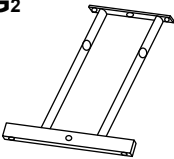
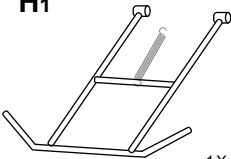
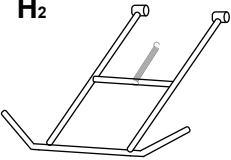
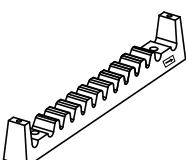
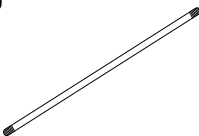

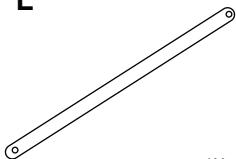
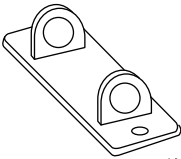
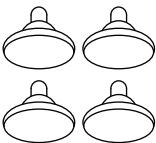









Installation



For the footstool

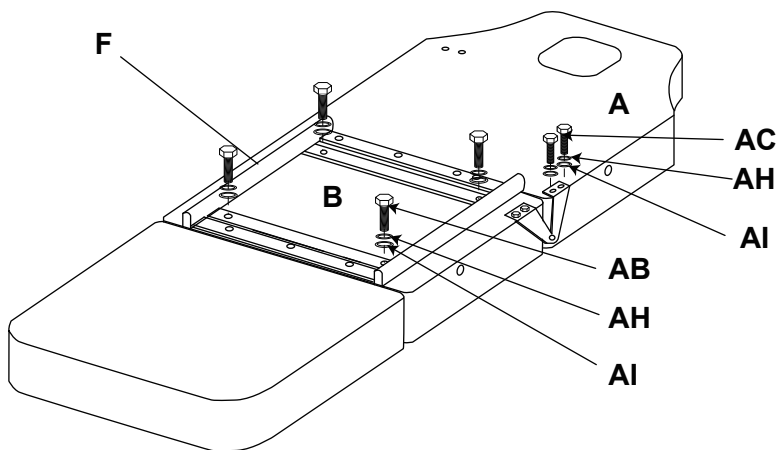
A  Backrest 1X	B  Seat 1X	C  Footrest 1X	D  Headrest 1X
E  Armrest 2X			

Installation

Accessories			
<div>F</div> <div></div> <div>Frame 1X</div>	<div>G₁</div> <div></div> <div>Frame 1X</div>	<div>G₂</div> <div></div> <div>Frame 1X</div>	<div>H₁</div> <div></div> <div>T-Beam with long spring 1X</div>
<div>H₂</div> <div></div> <div>T-Beam with short spring 1X</div>	<div>I</div> <div></div> <div>Serrated Strip 4X</div>	<div>J</div> <div></div> <div>Short Bar 1X</div>	<div>K</div> <div></div> <div>L-Beam 1X</div>
<div>L</div> <div></div> <div>Aluminium Strip 4X</div>	<div>M</div> <div></div> <div>Bar 1X</div>	<div>N</div> <div></div> <div>Pin 4X</div>	
Screws group in sub-package			
<div>AA</div> <div></div> <div>M8X20 6X</div>	<div>AB</div> <div></div> <div>M8X25 4X</div>	<div>AC</div> <div></div> <div>M8X35 4X</div>	<div>AD</div> <div></div> <div>M8X40 8X</div>
<div>AE</div> <div></div> <div>M4X20 8X</div>	<div>AF</div> <div></div> <div>M6X20 2X</div>	<div>AG</div> <div></div> <div>ø10 4X</div>	<div>AH</div> <div></div> <div>ø8 14X</div>
<div>AI</div> <div></div> <div>ø8 14X</div>			

Installation

1

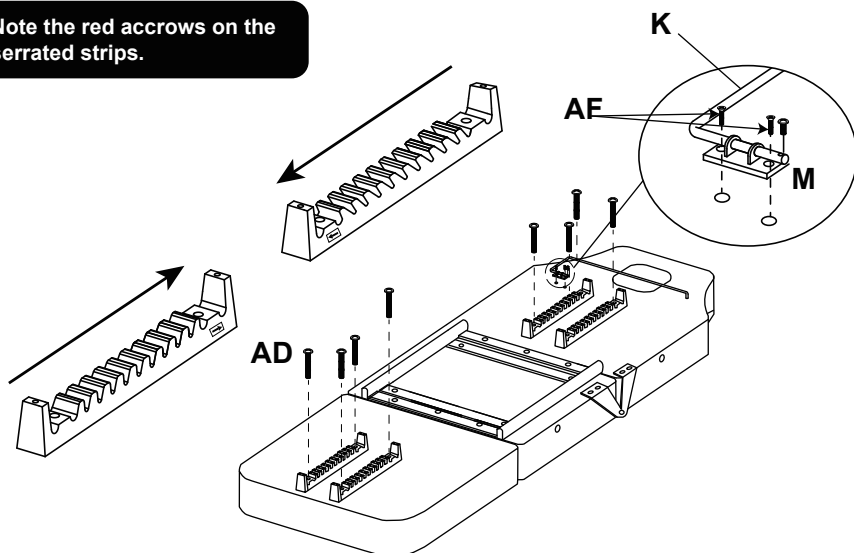


1.1 Connect the backrest (A) and the seat (B) with screws (AC/AH/AI).

1.2 Install the frame (F) on the seat with screws (AB/AH/AI).

2

Note the red accrows on the serrated strips.



2.1 Install the serrated strips (I) on the backrest and footrest with screws (AD).

2.2 Install the accessory (M) on the backrest with screws (AF).

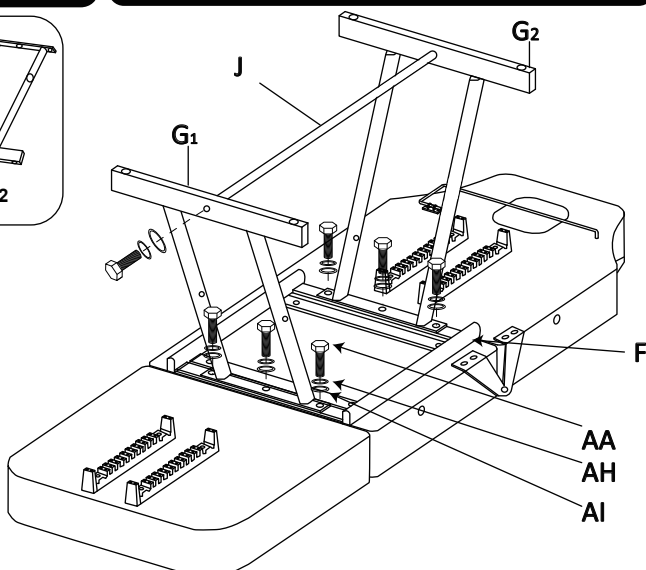
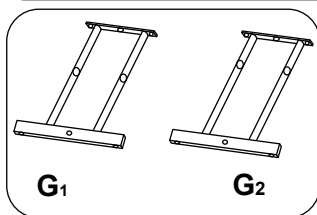
2.3 Insert the L-beam (K) into the accessory (M) and lock it with the screw preinstalled.

Installation

3

Note the different hole positions in the frames.

Please do not tighten the screws until all the holes are aligned.

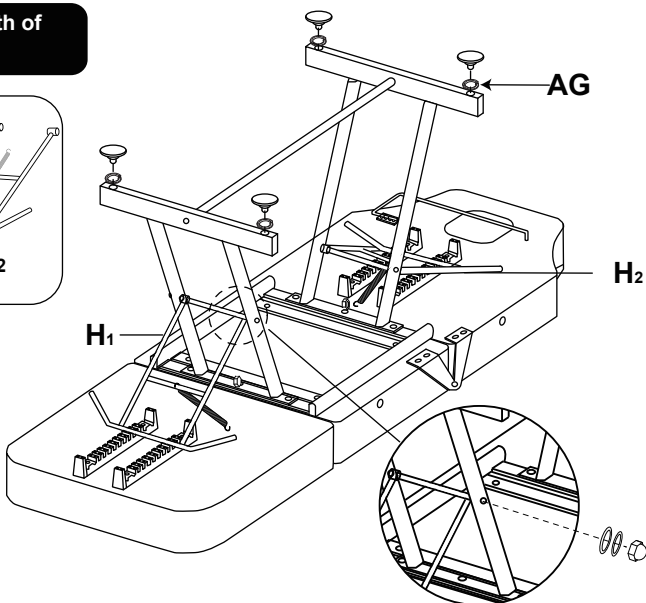
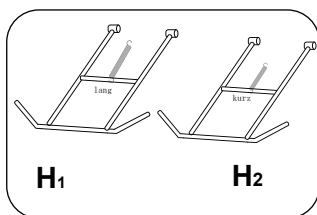


3.1 Install the frame (G1/G2) on the frame (F) with screws (AA/AH/AI).

3.2 Connect the frame (G1/G2) and the bar (J).

4

Note the different length of springs.

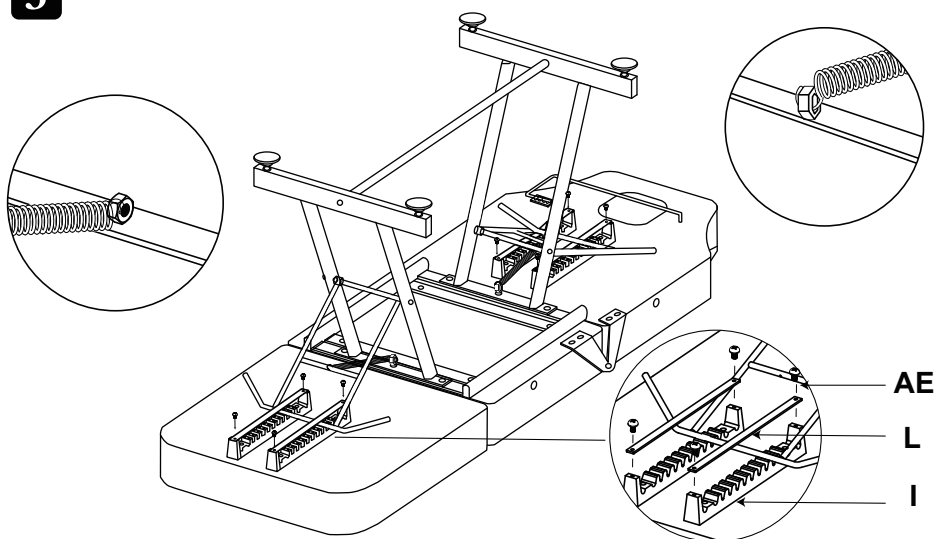


4.1 Install the T-beam with long spring (H1) on the frame (G1) with the screws preinstalled and the T-beam with short spring (H2) on the frame (G2).

4.2 Install the pins (N) and spring gaskets (AG) on the frame.

Installation

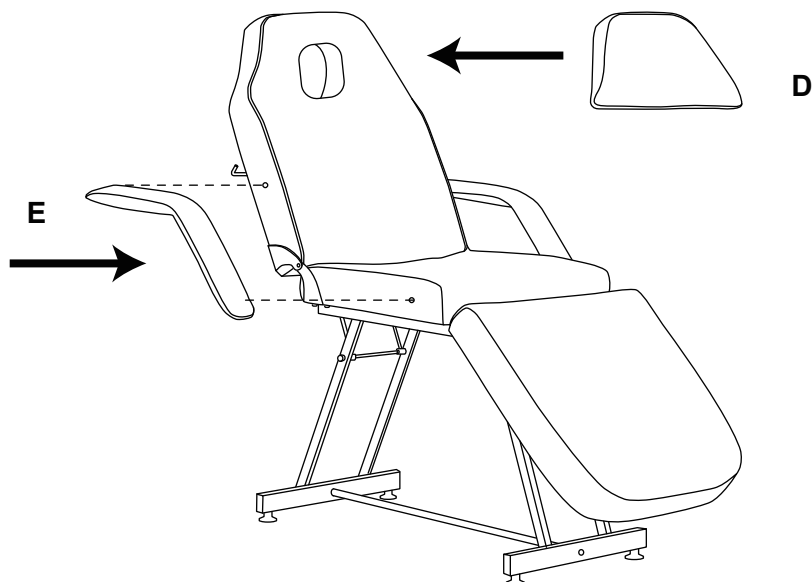
5



5.1 Place the T-beams (H1/H2) between the serrated strips (I) and install the aluminium strip (L) with screws (AE) on the serrated strips.

5.2 Connect the end of the springs and the middle screw of the frame (G1/G2).

6



6.1 Connect the armrest (E) and the headrest (D).



Pfillo GmbH

Adresse: Kreuzweg 60, 47809 Krefeld

E-Mail: pfillo.de@gmail.com

©Barberpub; 1. Auflage 2022



[Amazon.de](https://www.amazon.de)



[Barberpub.de](https://www.Barberpub.de)